


Model: W53

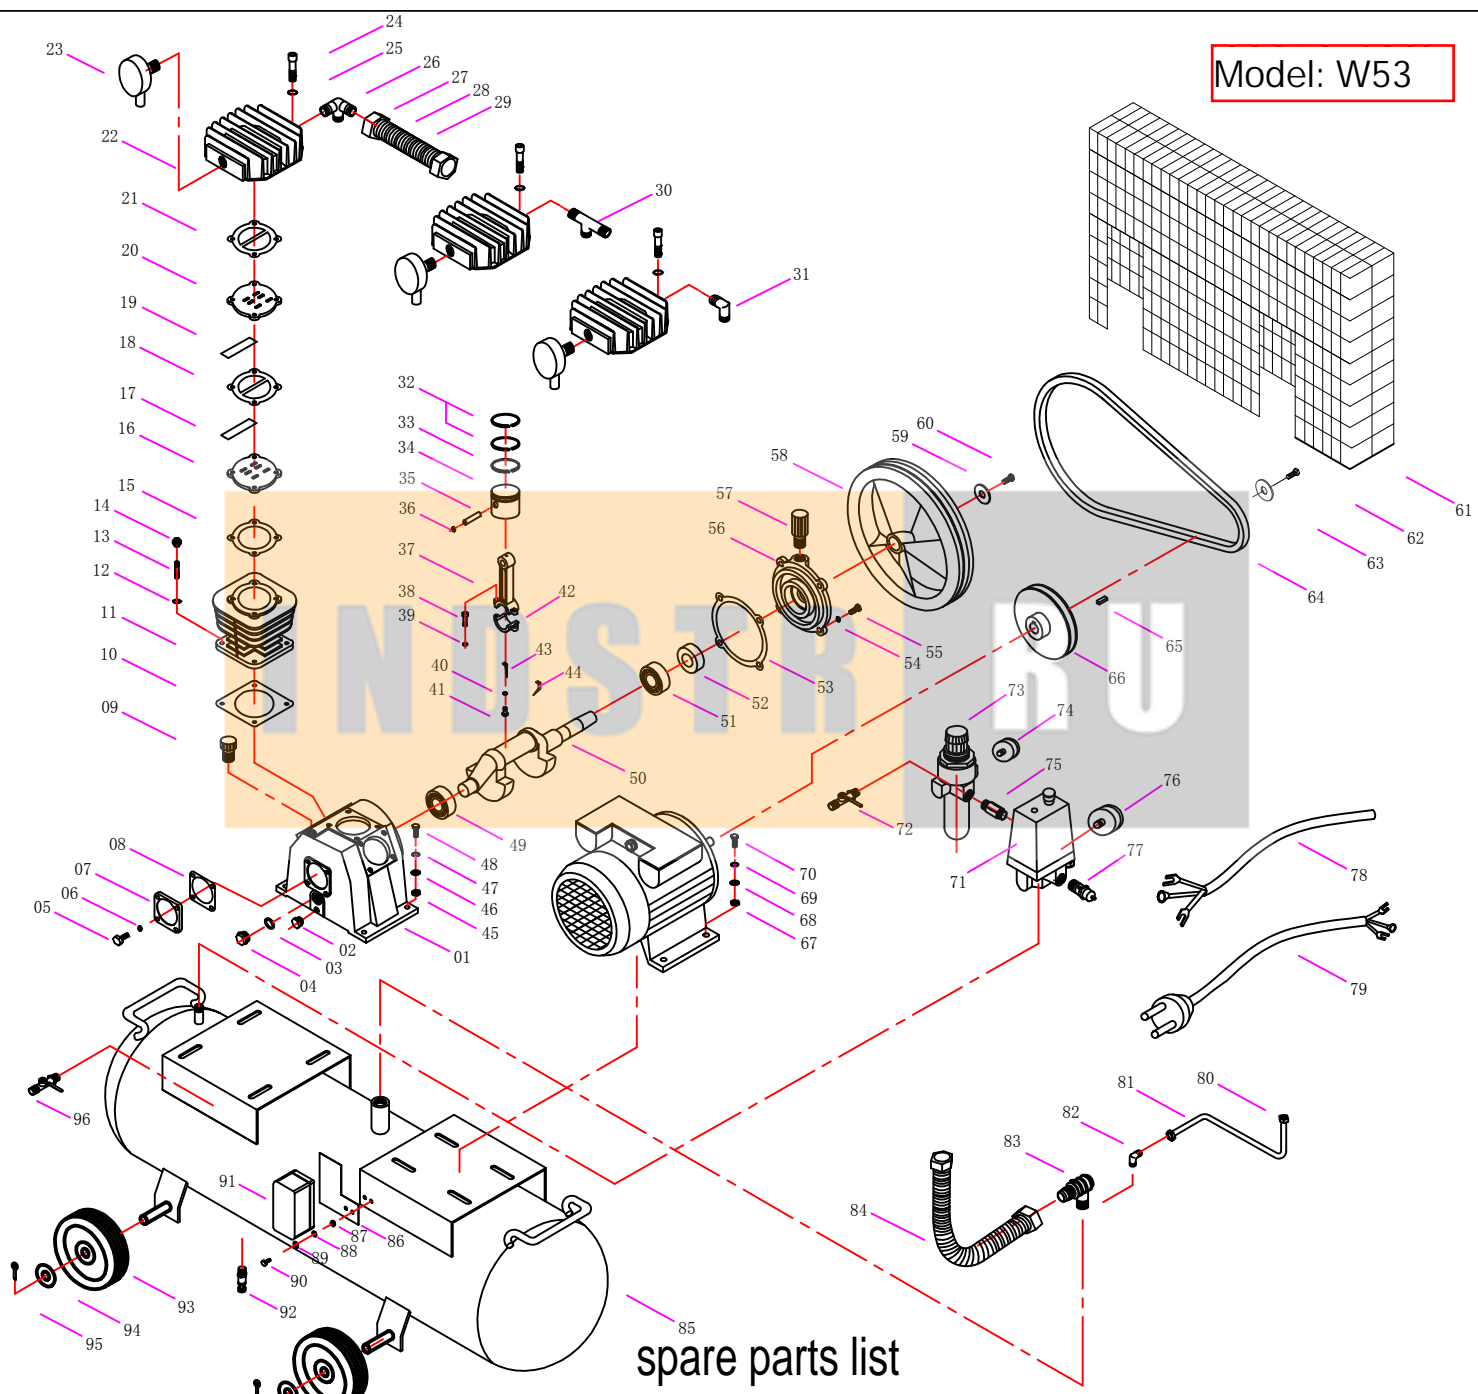

spare parts list

- |                       |                      |                        |                    |                     |                   |
|-----------------------|----------------------|------------------------|--------------------|---------------------|-------------------|
| 01 crank case         | 20 valve plate       | 39 spring washer       | 58 flywheel        | 76 pressure gauge   | 95 split pin      |
| 02 oil release plug   | 21 head cover gasket | 40 screw               | 59 flywheel gasket | 77 safety valve     | 96 air vent valve |
| 03 oil sight seal     | 22 head cover        | 41 bolt                | 60 bolt            | 78 motor power cord |                   |
| 04 oil viewer         | 23 air filter        | 42 spring washer       | 61 belt guard      | 79 power cord       |                   |
| 05 screw              | 24 bolt              | 43 fuel inject needle  | 62 bolt            | 80 nut              |                   |
| 06 spring washer      | 25 spring washer     | 44 fuel inject needle  | 63 flat gasket     | 81 tube             |                   |
| 07 real cover         | 26 three-way screw   | 45 nut                 | 64 belt            | 82 elbow            |                   |
| 08 real cover gasket  | 27 nut               | 46 flat gasket         | 65 key             | 83 check valve      |                   |
| 09 oil plug           | 28 exhaust pipe      | 47 spring washer       | 66 motor pulley    | 84 exhaust pipe     |                   |
| 10 cylinder gasket    | 29 cooling pin       | 48 bolt                | 67 nut             | 85 tank             |                   |
| 11 cylinder           | 30 three-way elbow   | 49 bearing             | 68 flat gasket     | 86 support          |                   |
| 12 spring washer      | 31 elbow             | 50 crankshaft          | 69 spring washer   | 87 nut              |                   |
| 13 bolt               | 32 compressor ring   | 51 bearing             | 70 bolt            | 88 spring washer    |                   |
| 14 nut                | 33 oil ring          | 52 oil seal            | 71 pressure switch | 89 flat gasket      |                   |
| 15 valve plate gasket | 34 piston            | 53 bearing seal gasket | 72 air vent valve  | 90 bolt             |                   |
| 16 valve gasket       | 35 piston pin        | 54 gasket              | 73 air regulator   | 91 protector        |                   |
| 17 valve reed         | 36 pin clip          | 55 bolt                | 74 pressure gauge  | 92 drain valve      |                   |
| 18 aluminum gasket    | 37 connecting rod    | 56 bearing seat        | 75 connecting bolt | 93 wheel            |                   |
| 19 valve reed         | 38 screw             | 57 breather            |                    | 94 flat gasket      |                   |