


Model: W88

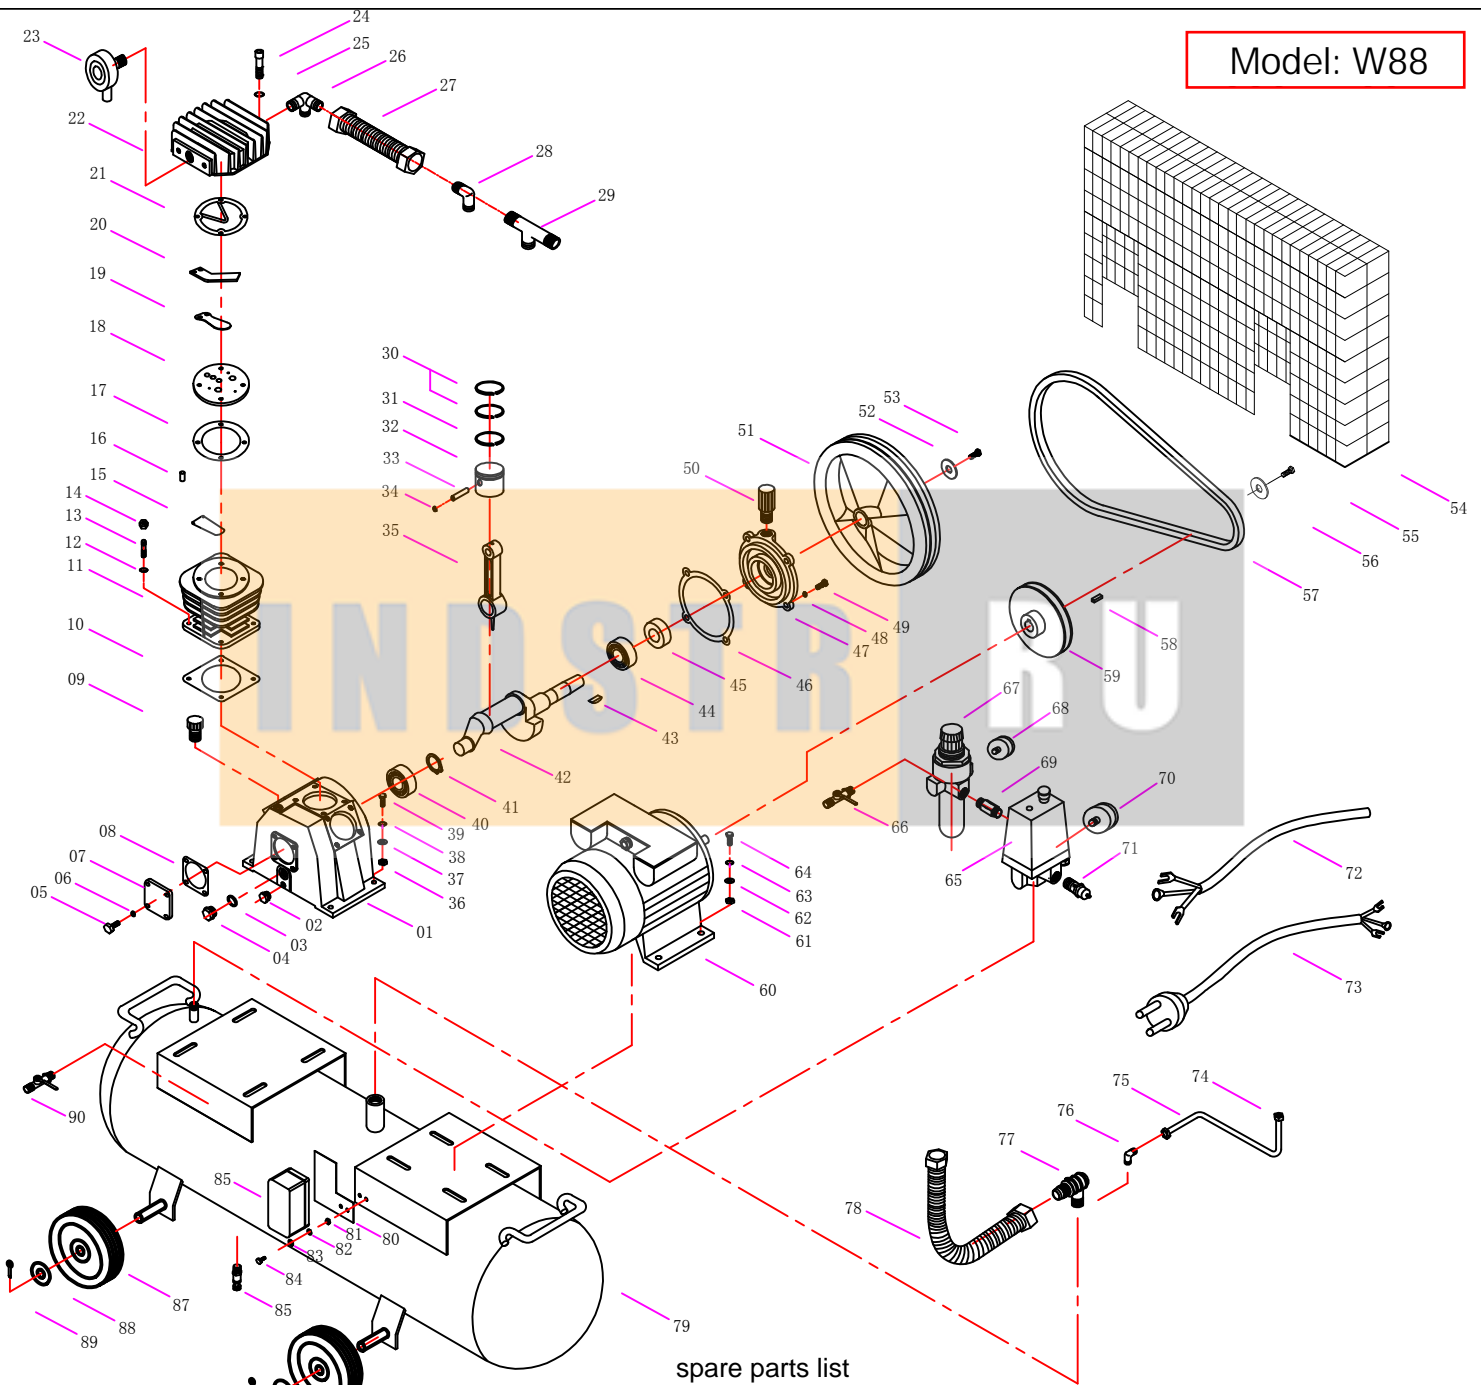

spare parts list

01 crankcase	18 valve plate	35 connecting rod	52 flywheel flat gasket
02 oil plug	19 valve plate	36 nut	53 bolt
03 oil sight seal	20 exhaust limter	37 flat gasket	54 belt guard
04 oil viewer	21 head cover gasket	38 spring washer	55 bolt
05 screw	22 head cover	39 bolt	56 flat gasket
06 spring gasket	23 air filter	40 bearing	57 belt
07 real cover	24 bolt	41 washer	58 key
08 real cover gasket	25 spring washer	42 crankshaft	59 motor pulley
09 breather	26 tee connect	43 key	60 motor
10 cylinder gasket	27 exhaust pipe	44 bearing	61 nut
11 cylinder	28 exhaust elbow	45 oil seal	62 flat gasket
12 spring washer	29 T connect	46 bearing seat gasket	63 spring washer
13 bolt	30 compressor ring	47 bearing seat	64 bolt
14 nut	31 oil ring	48 spring washer	65 pressure switch
15 admission valve	32 piston	49 screw	66 air valve
16 location pin	33 piston pin	50 breather	67 regulator
17 valve plate gasket	34 pin clip	51 flywheel	
			68 pressure gauge
			69 connecting bolt
			70 pressure gauge
			71 safety valve
			72 motor power cord
			73 power cord
			74 nut
			75 tube
			76 elbow
			77 check valve
			78 exhaust pipe
			79 tank
			80 support
			81 nut
			82 spring washer
			83 flat gasket
			84 bolt
			85 protector
			86 drain valve
			87 wheel
			88 flat gasket
			89 split pin
			90 air valve